




DISMANTLING OF A KENTER SHACKLE

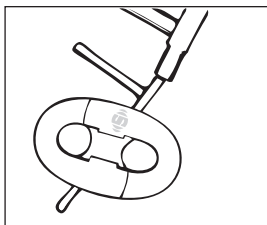

The taper pin is driven out with a punch from its narrow end. The lead pellet (for the securing of the taper pin) is displaced and the taper pin can be removed.

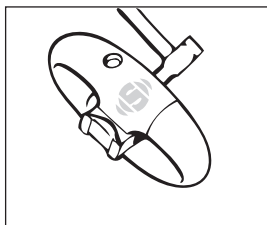

The center chock is knocked straight out.

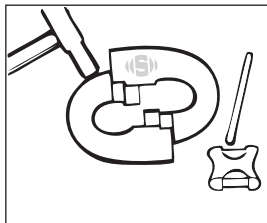

The shackle halves are separated.

Note: The measurements in tables may vary between different models. Sotra Anchor & Chain AS can not be hold responsible for any deviate between tables and delivered equipment.